


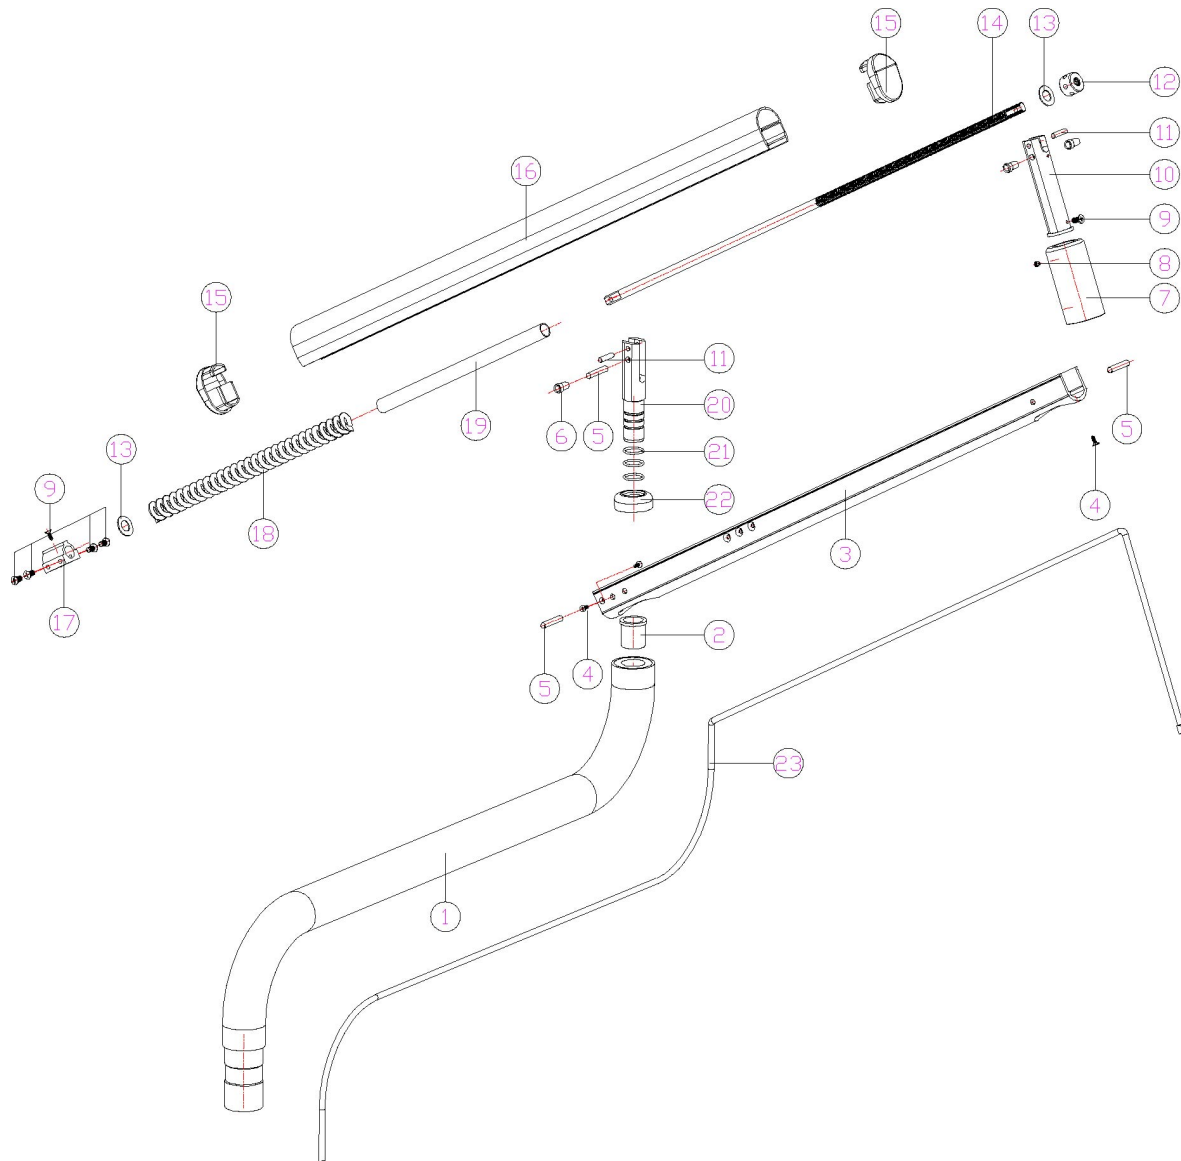

Lucent L600N Parts List



TPC 851 S. Lawson St. City of Industry, CA 91748
Phone 626-810-4337 Fax 626-810-4245



Lucent L600N Parts List

No.	Description	Part Number
1	Ridge Arm	L600N-ARM-RP-1
2	Nylon Hub	L600N-ARM-RP-2
3	Spring Arm Base	L600N-ARM-RP-3
4	Phillips Screw	L600N-ARM-RP-4
5	Pin	L600N-ARM-RP-5
6	Bushing	L600N-ARM-RP-6
7	Bell Assembly	L600N-ARM-RP-7
8	Set Screw	L600N-ARM-RP-8
9	Phillips Screw	L600N-ARM-RP-9
10	Upper Knuckle	L600N-ARM-RP-10
11	Pin	L600N-ARM-RP-11
12	Tension Nut	L600N-ARM-RP-12
13	Washer	L600N-ARM-RP-13
14	Spring	L600N-ARM-RP-14
15	End Cap Cover	L600N-ARM-RP-15
16	Spring Arm Top Cover	L600N-ARM-RP-16
17	Tension Block	L600N-ARM-RP-17
18	Spring	L600N-ARM-RP-18
19	Spring Sleeve Guard	L600N-ARM-RP-19
20	Connecting Hub	L600N-ARM-RP-20
21	O-Ring	L600N-ARM-RP-21
22	Bezel Cover	L600N-ARM-RP-22
23	2 Conductor Wire Harness	L600N-ARM-RP-23
24	Nylon Light post bushing Not on Diagram!	L600N-ARM-RP-24