


## MC3600 Parts List



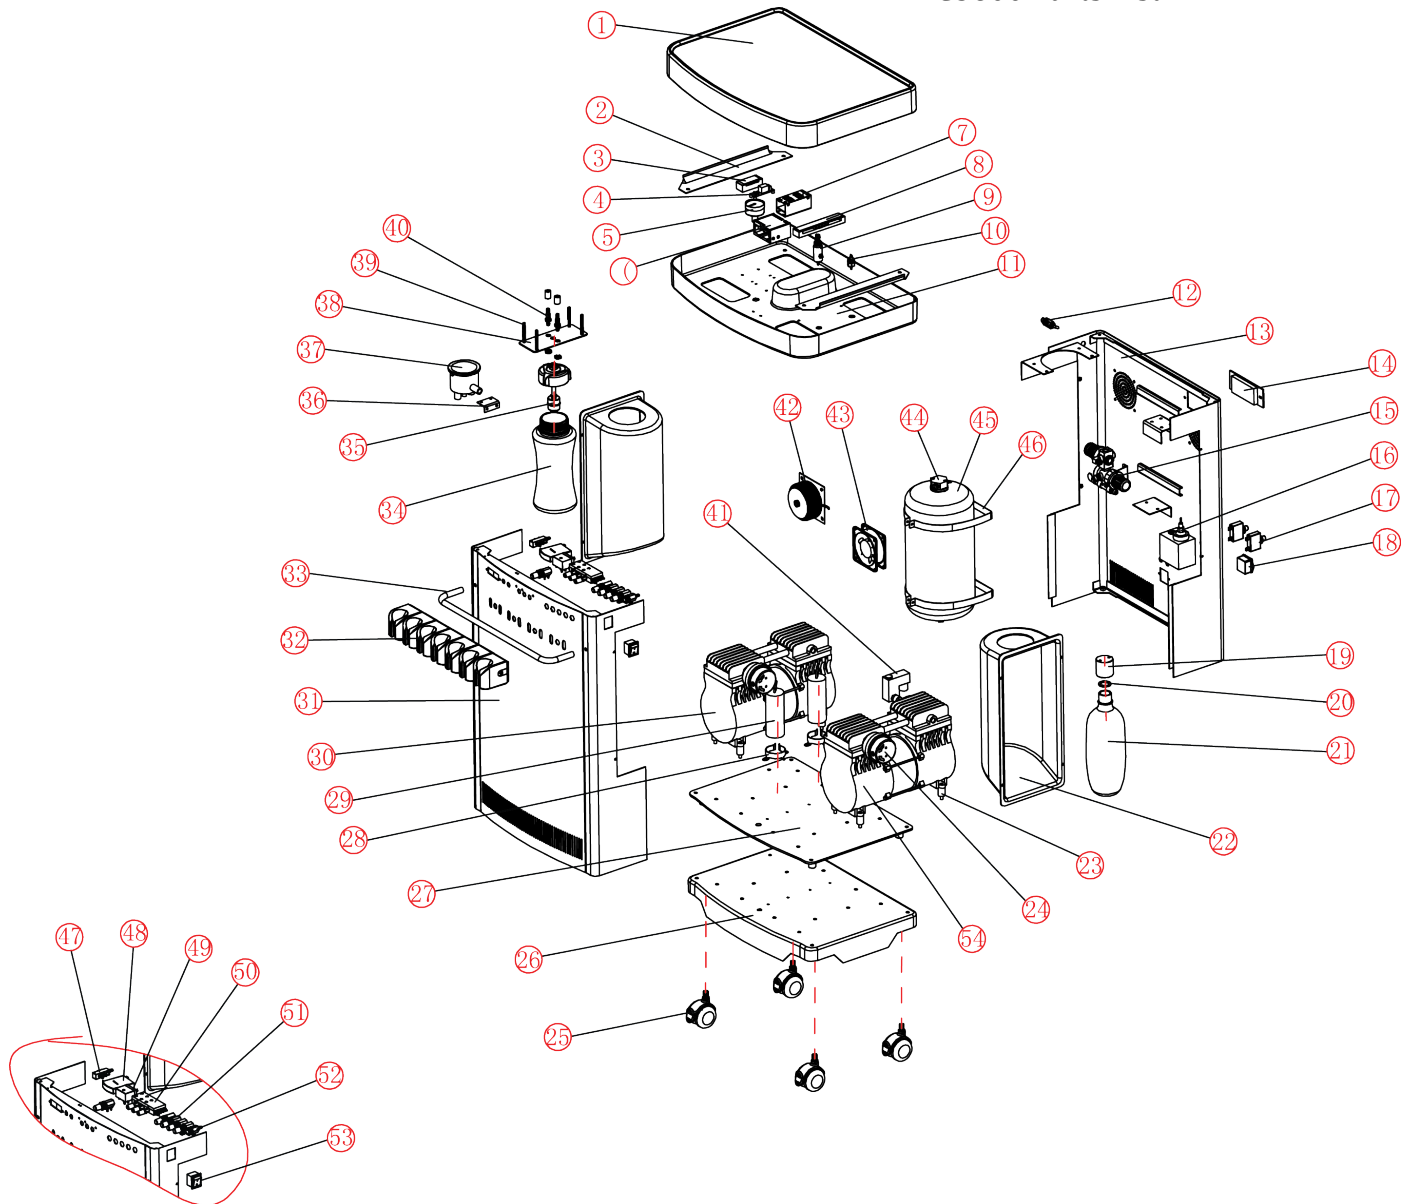

MC3600 Parts List

No.	Description	Part Number	No.	Description	Part Number
1	Plastic Top Cover	3600-RP-1	28	Start Capacitor Bracket	3600-RP-28
2	Support Brace L / R	3600-RP-2	29	Start Capacitor	3600-RP-29
3	Power Terminal Block	3600-RP-3	30	Motor	3600-RP-30
4	Suction Relay PCB	3600-RP-4	31	Front Case	3600-RP-31
5	Pressure Gauge	3600-RP-5	32	HP Holder	3600-RP-32
6	Piezo Scaler PCB	3600-RP-6	33	HP holder Bar	3600-RP-33
7	5Vdc power supply	3600-RP-7	34	Waste Bottle	3600-RP-34
8	Power Terminal Block	3600-RP-8	35	Fill sensor	3600-RP-35
9	Mini Regulator	3600-RP-9	36	Bracket	3600-RP-36
10	Pressure Switch	3600-RP-10	37	Solids Collector	3600-RP-37
11	Top Frame	3600-RP-11	38	Waste bottle bracket	3600-RP-38
12	Purge Valve	3600-RP-12	39	Stand Off screws	3600-RP-39
13	Rear Case	3600-RP-13	40	Adaptor Fitting	3600-RP-40
14	110V Receptacle	3600-RP-14	41	Pressure Relive Valve	3600-RP-41
15	Master Regulator	3600-RP-15	42	24V transformer	3600-RP-42
16	Pressure Switch	3600-RP-16	43	Cooling Fan 110V	3600-RP-43
17	Re-settable Fuse	3600-RP-17	44	Tank Check Valve	3600-RP-44
18	Inlet Power Port	3600-RP-18	45	Tank 7L	3600-RP-45
19	Bottle Cap Assembly	3600-RP-19	46	Tank Strap	3600-RP-46
20	Water Bottle Gasket	3600-RP-20	47	Air Manifold	3600-RP-47
21	Water Bottle 750 ML	3600-RP-21	48	HP pressure Gauge	3600-RP-48
22	Side Enclosure Rt	3600-RP-22	49	Water Relay	3600-RP-49
23	Motor Rubber Legs	3600-RP-23	50	Tri Block	3600-RP-50
24	Motor Air Filter	3600-RP-24	51	Needle Valve (water)	3600-RP-51
25	Caster	3600-RP-25	52	On/off 3 way Valve	3600-RP-52
26	Bottom Case Base	3600-RP-26	53	Main Power Switch	3600-RP-53
27	Motor Mounting Plate	3600-RP-27	54	Power Cord	3600-RP-54